

**14. REMOTE CONTROL UNIT HOLDER INSTALLATION**

**CAUTION**


(1) Check that the indoor unit correctly receives the signal from the remote control unit, then install the remote control unit holder.

(2) Select the remote control unit holder selection site by paying careful attention to the following: Avoid places in direct sunlight. Select a place that will not be affected by the heat from a stove, etc.

Install the remote control unit holder to a wall or pillar with the tapping screws.

[Remote control handy type]


Fig.49

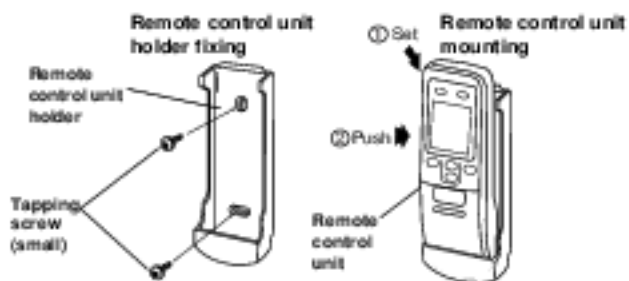

[Remote control wall fixing type]


- Install the remote controller so that the front is facing the photocell.(Fig.50)

Fig.50

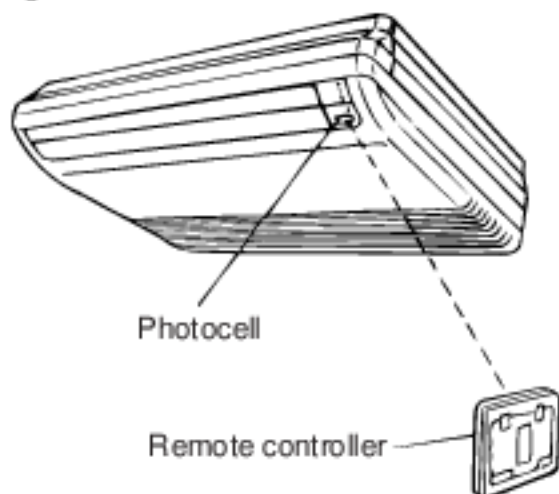

- Install the remote controller with a distance of 7 m between the remote controller and the photocell as the criteria. However, when installing the remote controller, check that it operates positively.
- Install the remote controller holder to a wall, pillar, etc. with the two screws(medium).
- Hook the remote controller to the hook of the remote controller holder.(Fig.51)

Fig.51

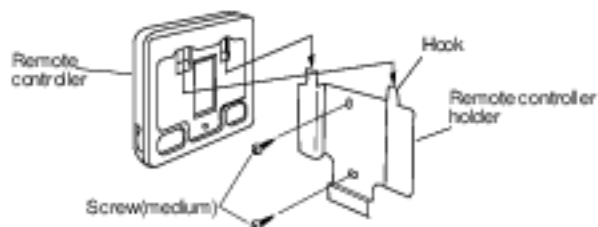

- Fasten the remote controller to the remote controller holder with the machine screw (small).(Fig.52)

Fig.52

